


1

## OT17SWB and OT24SWB Installation Instructions


PATENT PENDING

1. Install the Oliver Technologies approved anchors according to the manufacturer's installation instructions.

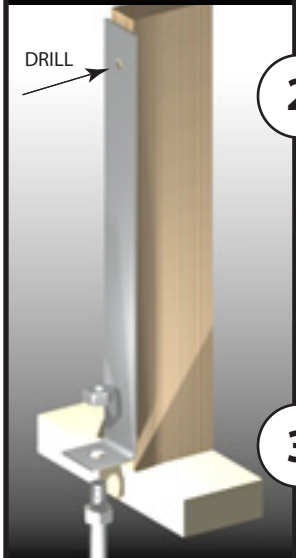

2

2. Attach the bracket (OT17SWB or OT24SWB) by inserting the bottom bracket hole over the installed ground anchor bolt head or use anchor bolt. (Refer to anchor bolt installation instructions) Thread on nut and tighten.

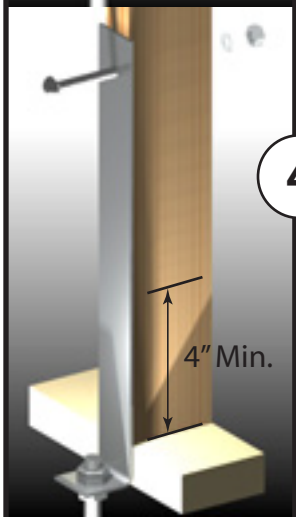

3

3. Center the sidewall bracket on the 2 x 4 stud. Drill a 3/8" hole in the center of the stud using the 3/8" hole on the bracket as a guide.

4

4. Attach the (OT17SWB or OT24SWB) bracket to the 2" x 4" stud using a 3/8" bolt (Grade 2 minimum), 2 washers and nut. Tighten until the bracket is secure to the stud. Bolt must be a minimum of 4" above the face of the bottom plate stud.